SAMSUNG

SERIES 8

8000

QUICK START GUIDE

BN68-05493A-00

Attach the TV to the Stand — Step 1

Connect video devices — Step 2

Insert the batteries into the remote control — Step 3

Power on and start the initial setup — Step 4

Warning: Screens can be damaged from direct pressure when handled incorrectly. We recommend lifting the TV by the edges, as shown.

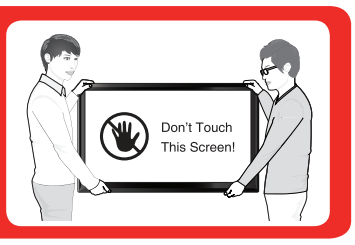

Welcome to your new Smart TV!

The following instructions cover assembling, connecting, and setting up your new TV. Make sure you have the accessories listed below.

Included with your TV

Remote Control

Smart Touch Control

Batteries (AAA x 4)



Remote Control

Stand Parts and Cables



Power inlet cover

Cable clip

Safety strap

x 2

Wall mount adapter

IR extender

Power cord

RCA Adapter x 2

Component adapter

Base

x 2

Leg

x 8

Screws

Also included: User manual, 3D Active Glasses

Step 1 Attach the TV to the Stand

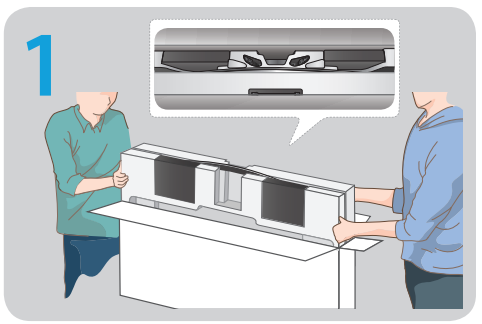

Open the package, and remove the top piece of packing material, leaving the screen in the box.

REQUIRED TOOLS: a Phillips head screwdriver and a soft, flat surface larger than the TV (such as the box).

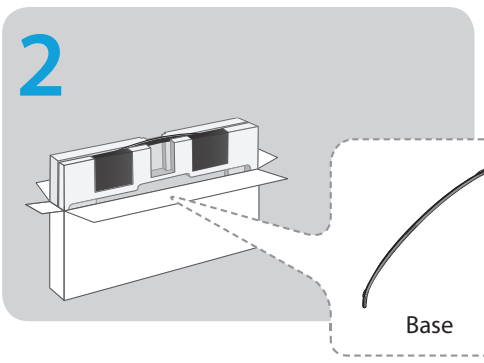

Assemble the stand first, before removing the TV from the box. You will need the base, legs and screws.

Accessories may be located at different positions, depending on the model.

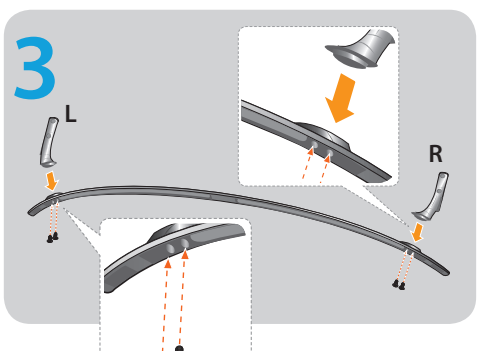

Fit the base and legs together, making sure that the legs are correctly aligned with the base.

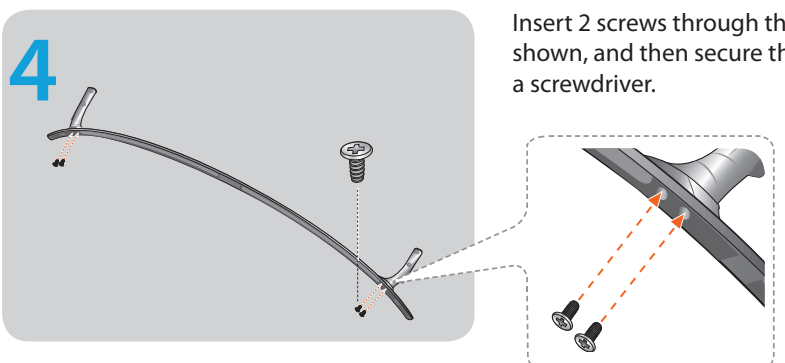

Insert 2 screws through the base into each leg as shown, and then secure the legs to the base with a screwdriver.

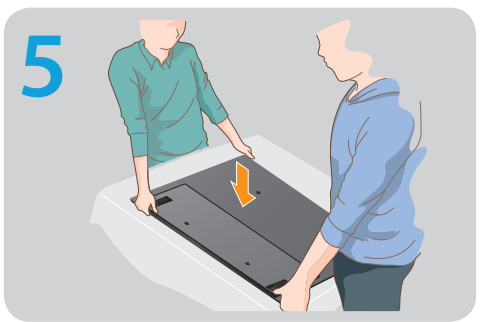

Lay the TV on a soft surface, screen side down. Use the packing material to protect the screen.

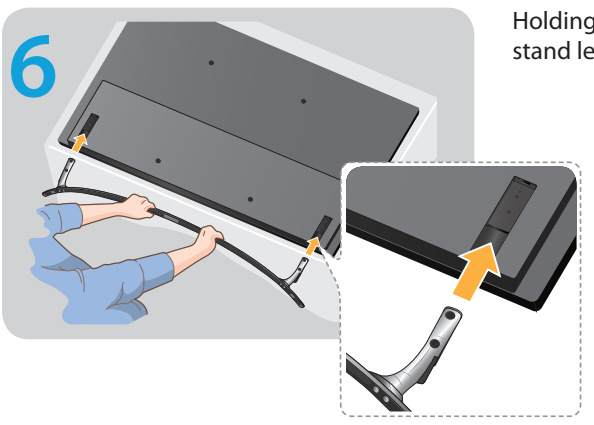

Holding the stand parallel to the screen, slide the stand legs into the notches on the back of the TV.

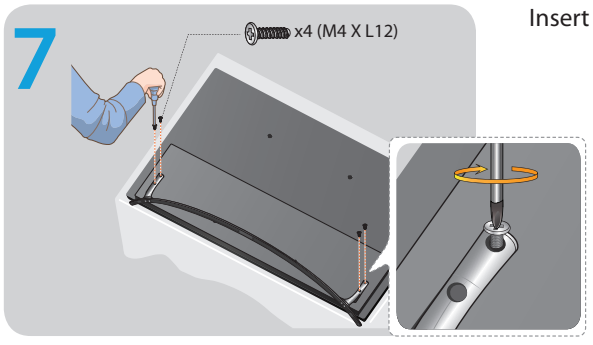

Insert 4 screws and secure the stand to the TV.

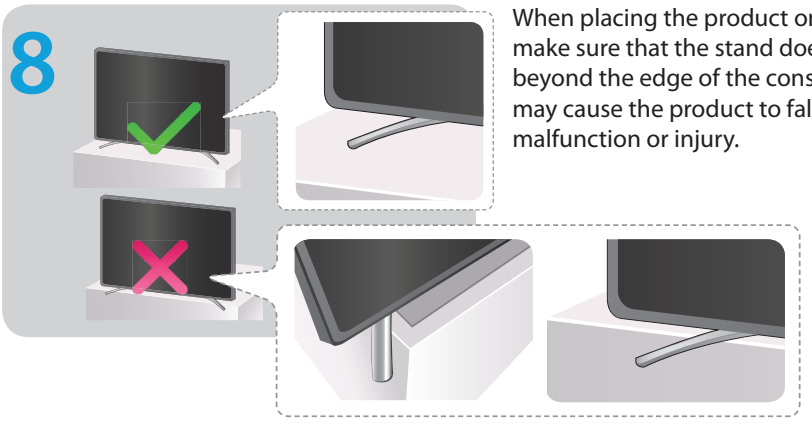

When placing the product on a console or shelf, make sure that the stand does not protrude beyond the edge of the console or shelf. This may cause the product to fall off and result in a malfunction or injury.

Step 2 Connect video devices

We recommend using High-Speed HDMI connections whenever possible for the best picture quality. Use the included AV adapters to connect older devices.

✎ Please check the shape of the plugs to make to avoid inserting upside down.

✎ The displayed image may differ depending on the model.

Remove the Connection Cover

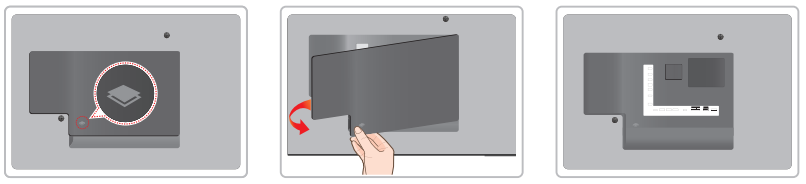

USB Connections

You can connect USB storage devices to the USB ports and enjoy personal photos, videos, and music.

You can connect home theater systems to the OPTICAL or AUDIO OUT ports.

Best Connection : HDMI

We suggest using HDMI whenever possible.

HDMI Cable



HDMI 1 is the default port for a cable or satellite set-top box.

Use the other ports for Blu-ray players, game consoles, and other devices.

HDMI Port

TV Camera

Press the camera down to activate it. The camera enables voice recognition and motion control for your TV.

Scroll wheel on the back of your TV to adjust camera angle.

Power Input

Good Connection : Component and AV

Match the colors on your device's cables to the colors on the ports. Connect the yellow composite video out connector from an AV device to the yellow AV IN port.

Component

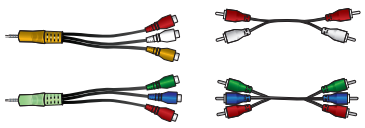

AV



Wired Ethernet

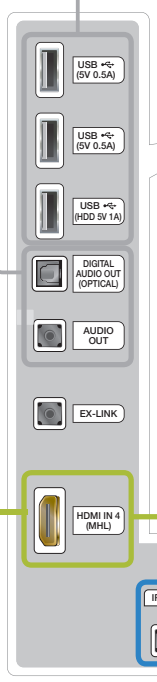

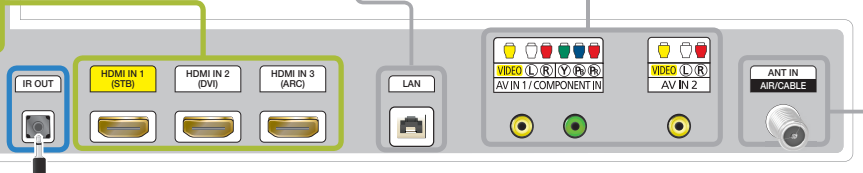

Connect the IR extender to the IR Out port to control external devices connected to the TV using the Smart Touch Control. For more detailed information, refer to the "Universal Remote Control Setup" section on the User manual.

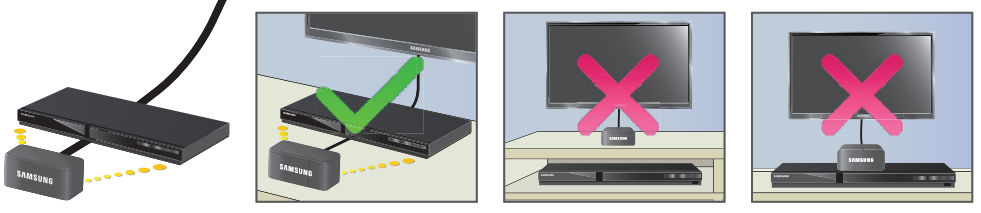

Connect the cable from the antenna or cable TV outlet.

Step 3 Using the Smart Touch Control

Insert the batteries into the remote control

With the tip of a credit card (or similar item), use a twisting motion to remove the remote back cover.

✎ Check the location of the battery cover groove. The groove's location may vary depending on the type of Smart Touch Control is provided with the product.

Using the touch pad

navigation	selection	scrolling
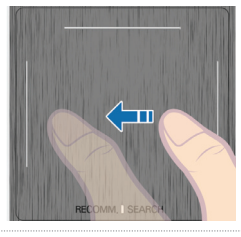	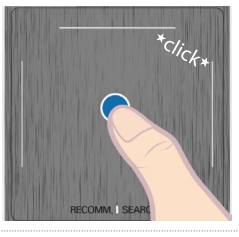	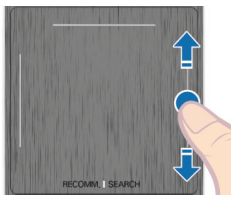
To control the highlight, move your thumb across the pad.	To select an item, press the pad until you feel a click.	Move your thumb along the ridges to quickly scroll through items.

Step 4 Power on and start the initial setup

Information required:

- Wi-Fi network password (if you use one)
- Zip code
- Cable or satellite provider info

Troubleshooting

The stand is wobbly or crooked

Make sure the stand is properly assembled.

The TV won't turn on

Make sure all cables are fully inserted, and that the remote has batteries installed.

I don't know where to plug in <device>

Devices without HDMI may require the included A/V adapter.

I have extra parts

The TV includes some optional parts to help with wall mounting and cable routing.

If you experience issues, please do not take the TV back to the store.

In the United States of America, call us at 1-800-SAMSUNG (1-800-726-7864) or visit us at www.samsung.com or www.samsung.com/spsn for support and warranty service.

For other countries, refer to "Contact SAMSUNG WORLDWIDE" in the user guide.

Congratulations on your new Smart TV!